



# Disassembling RCA 22" DECK215R HDTV

## Stand and Back Panel

To repair or replace most parts on the RCA DECK215R HDTV, the stand and back panel need to be removed first.

Written By: Patrick Soper



## INTRODUCTION

The stand and back panel removal are the first steps to fixing anything in your TV.

---





### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-




## Step 1 — Removing the Stand

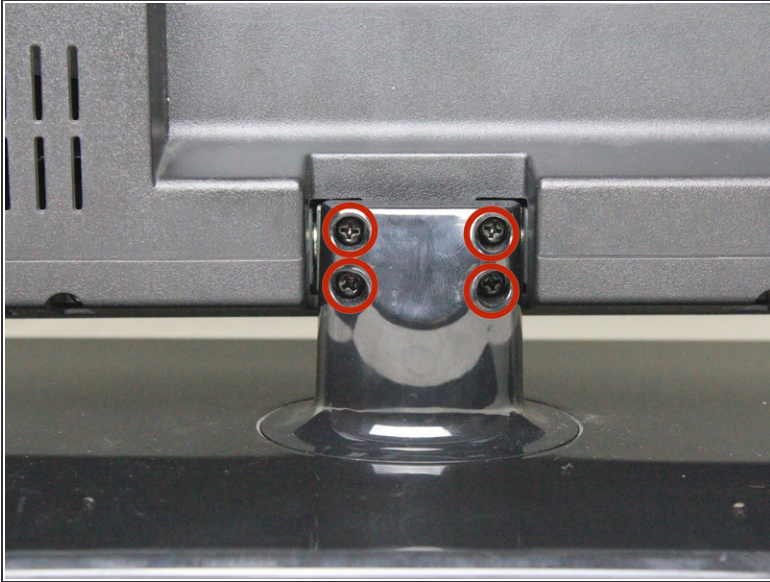

 Before disassembling your television, ensure that all cables are unplugged from their power source to avoid serious injury or death from electrocution.

- Lay the TV flat with the screen facing down.
- Remove the four, 12mm Phillips #2 screws from the back of the TV stand. Support the TV from underneath as you remove the screws, so the bottom does not fall on the table.
- Remove the stand by lifting it away from the TV's backing.

## Step 2 — Removing the Back Panel

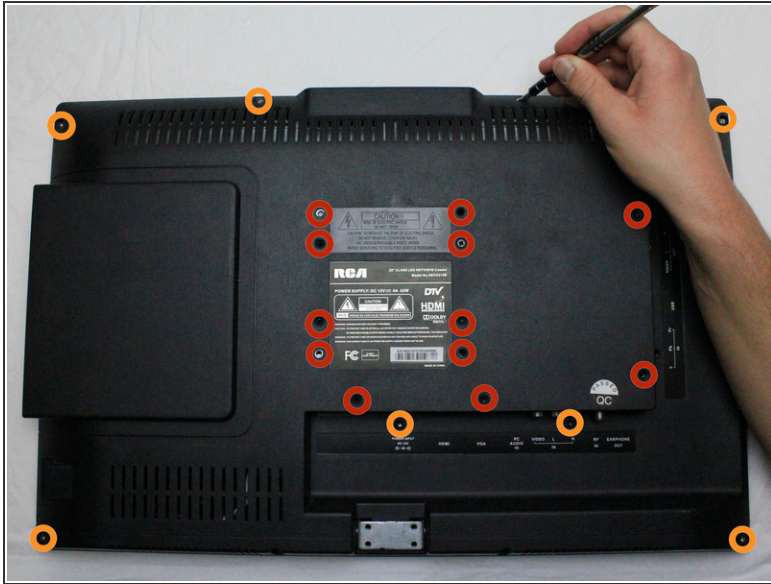

- Remove the twelve, 6mm Phillips #2 screws from the middle of the TV's rear casing.
- Remove the seven, 9mm Phillips #2 screws from the outer edge of the TV's rear casing.
- While holding the screen down, pull the back panel up slowly, ensuring that you do not forcibly disconnect the remaining ribbon cable.


## Step 3 — Locate Pin



- Position the television to where the back panel is resting on the table and the screen is vertical.
- Peel the tape covering the ribbon cable horizontally.



## Step 4

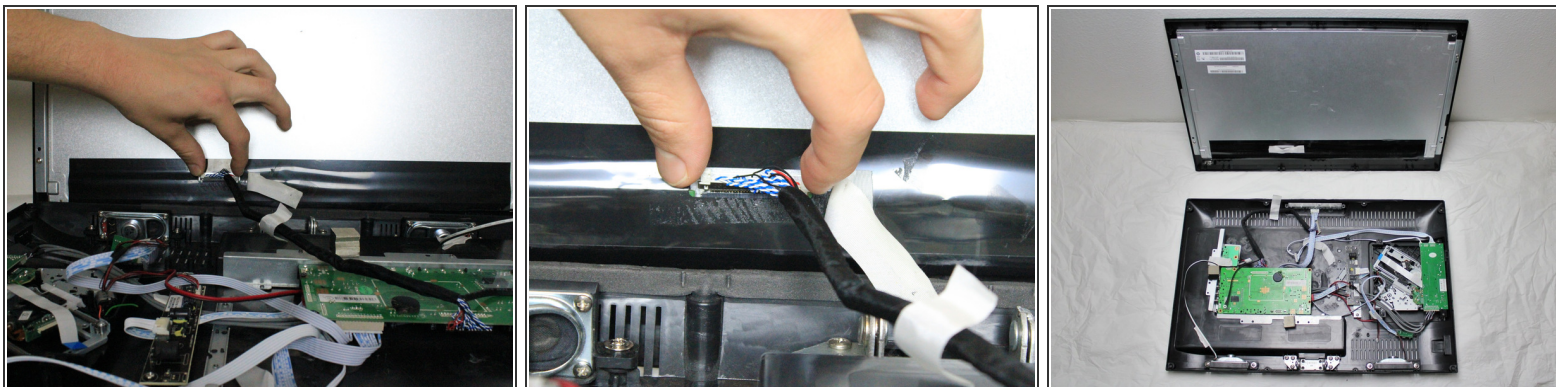

- Pinch the clamps on both sides of the ribbon cable casing to detach it from the screen panel.
- Remove the screen to isolate the back panel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-09 09:43:56 AM.